
42-0150 Disassembly and assembly of fixed caliper, replacement of parts according to condition

Preceding work: Remove brake pads (42-0160) Remove fixed caliper on front axle or rear axle (42-0100 or 0120). Operation no. of operation texts and work units or standard texts and flat rates 42-5183, 42-5185

A. Front axle

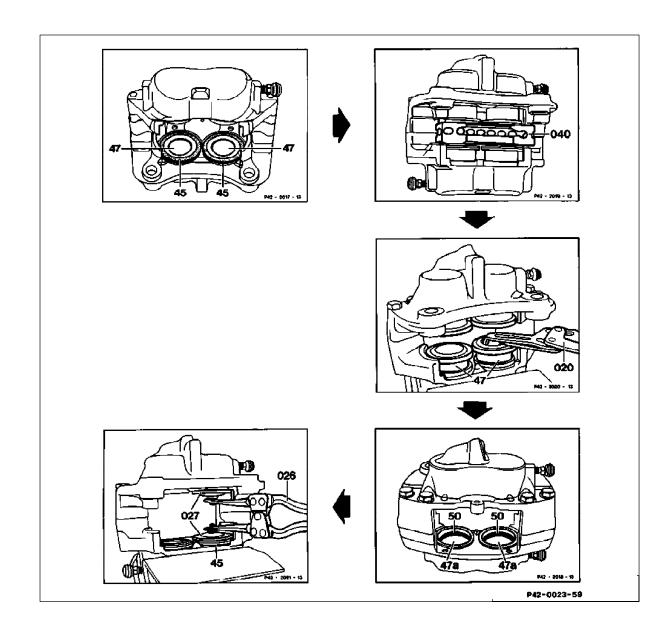

M

Do not separate the two halves of the fixed caliper, because the mounting bolts are tightened to a certain torque at the production plant. Failure to observe could result in leaking fixed calipers.

Dust cap (45)	_ press off housing with screwdriver.
Metal segment, 28 mm thick (040)	_ insert into fixed caliper, then carefully force pistons
	(47) out against stop with compressed air. A part of a brake disc may be used as the metal segment.
Piston (47)	remove with piston turning tongs (020)
	000 589 50 37 00. If the pistons are seized due to rust, install new fixed caliper.
	Remove any deposits on the piston with a soft brass
	wire brush or rough cloth. Do not use polishing or emery cloth on the piston to prevent damaging the chrome-plated surface. If damage to the chrome plating is noticed, replace piston.
Piston seal (50)	remove out of groove in cylinder bore. Check
	cylinder bores in fixed caliper for signs of wear. If bores are scored or rusted, replace complete fixed caliper. Narrow, light rust spots in the bore can be removed with polishing cloth, more severe rust in front of the groove for the piston seal can be removed with fine emery paper (grain size 380 to 500). Lightly coat new piston seal with ATE brake cylinder paste and insert into groove in cylinder bore.
Piston (47)	insert into bore in fixed caliper (47a). Install dust cap
	(45) on piston and position at collar of fixed caliper.
Dust cap (45)	press onto collar of fixed caliper with pliers (026) 000
	589 49 37 00 and appropriate discs (027).

Data

Model	Fixed caliper brand	Housing dia. new 1) bottom top	Shaft width for brake pads	Brake disc dia.	Brake disc thickness
124.036 5) 201.036	Teves Brembo 2)	<u>37.98 - 38.03</u> 41.98 - 42.03	100+0.15	300±0.4	28

124.008 8)	124.029 8)	Teves	37.98 - 38.03	100+0.15	295-0.4	22
124.031	124.032 8)		41.98 - 42.03			
124.034 3)	124.051					
124.052 8)	124.061					
124.091	124.092 8)					
124.008 9)	124.029 9)	Teves	37.98 - 38.03	100+0.15	294±0.4	25
124.032 9)	124.034 4)		41.98 - 42.03			
124.052 9)	124.066					
124.092 9)						
124.034 6)	124.036 7)	Girling	39.98 - 40.03	100+0.2	320±0.4	30
		Lucas	43.98 - 44.03			


¹⁾ The housing diameter at the outer section of the bore may be exceeded by up to 0.1 mm by polishing with emery cloth for repair.

- 3) H I model year 92.
- 4) Up to 02/93, H I as of model year 93.
- 5) Up to 01/93 and H I .
- 6) As of 03/93, except H I .
- 7) As of 02/93, except H I .
- 8) Up to 10/92.
- 9) As of 11/92.

Lubricant

ATE brake cylinder paste


Special tools

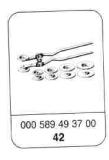



B. Rear axle

²⁾ Light alloy brake caliper (models 124.036 up to 01/93 and 201.036 Evolution II only).

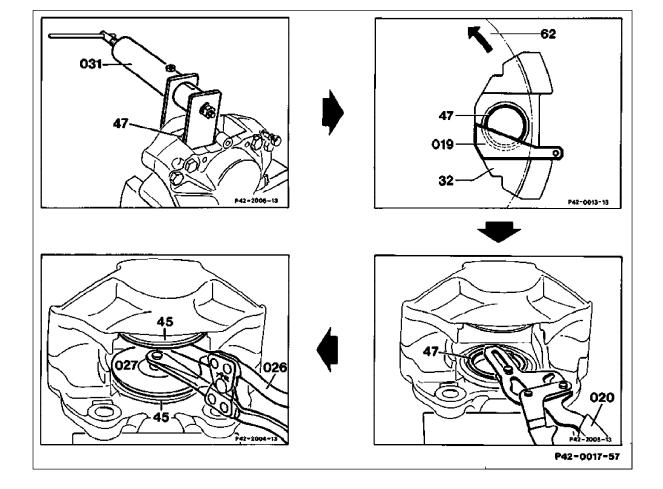

M

Do not separate the two halves of the fixed caliper, because the mounting bolts are tightened to a certain torque at the production plant. Failure to observe could result in leaking fixed calipers.

Dust cap (45)	press off housing with screwdriver.
DUSI (20 (45)	DIASS OIL DOUSING WITH SCIEWOUVEL

Piston (47)

hold with resetting tool (031) 000 589 52 43 00. Then carefully press out opposing piston with compressed air, remove piston with turning tongs (020) 000 589 50 37 00 if necessary. If the pistons are seized due to rust, install new fixed caliper. Remove any deposits on the piston with a soft brass wire brush or rough cloth. Do not use polishing or emery cloth on the piston to prevent damaging the chrome-plated surface. If damage to the chrome plating is noticed, replace piston.

Piston seal_	remove out of groove in cylinder bore. Check
	cylinder bores in fixed caliper (32) for signs of wear. If bores are scored or rusted, replace complete fixed caliper. Narrow, light rust spots in the bore can be removed with polishing cloth, more severe rust in front of the groove for the piston seal can be removed with fine emery paper (grain size 380 to 500). Lightly coat new piston seal with ATE brake cylinder paste and insert into groove in cylinder bore.
Piston (47)	insert piston into bore in fixed caliper (32) so that the
	elevated section (marked black) on the piston points upward when the fixed caliper (32) is installed. The elevated section ensures one-sided contact of the brake pads during braking. This reduces the tendency to squeak. For this purpose insert gauge (019) 000 589 35 23 00 and turn piston with piston turning tongs (020) 000 589 50 37 00. Install dust cap (45) on piston and position at collar of fixed caliper (32).
Dust cap (45)	press onto collar of fixed caliper with pliers (026) 000 589 49 37 00 and appropriate discs (027).

Data

	201.01 201.02 201.1	124.01 124.020	124.092 5)	124.003	124.034	124.008	104 006 0
		124 020		12 11000	127.007	124.000	124.036 3)
	201.1	124.020		124.004	124.036 2)	124.029	
	201.1	124.021		124.007		124.091	
		124.022		124.027		124.092 4)	
		124.023		124.031			
		124.026		124.032			
		124.028		124.051			
		124.030		124.052			
		124.04		124.06			
		124.050		124.07			
		124.120		124.08			
		124.125		124.090			
		124.126		124.10			
		124.128		124.127			
		124.13		124.129			
		124.226		124.18			
		124.230		124.19			
		124.33		124.29			
		201.034		124.39			
		201.035		201.036			
Brand and	ATE 35,	ATE 35,	ATE 36	ATE 38	ATE 38	ATE 42	Bendix 46
version	Bendix fixed caliper for lining thickness of	Bendix fixed caliper for lining thickness of	Fixed caliper	Fixed calipe		Fixed caliper	Fixed caliper
	13.5 mm	15.5 mm					

Housing dia., new 1)	34.98	34.98	35.99	37.99	37.99	41.99	45.99
	35.03	35.03	36.03	38.03	38.03	42.03	46.03
Shaft width for brake pads	62+0.2	62+0.2	62+0.2	62+0.2	62+0.2	62+0,2	62+0.2
Brake disk thickness	9	9	10	9	24	20	22
Brake disk dia.	258±0,4	258±0,4	290±0,4	278±0,4	278±0,4	278±0,4	300±0,4

1) The housing diameter at the outer section of the bore may be exceeded by up to 0.1 mm by polishing with emery cloth for repair.

2) Up to 01/93 and H I .

3) As of 02/93, except H Ⅰ .

4) Up to 03/95

5) As of 04/95

Lubricant

ATE brake cylinder paste

Special tools

